

# INSTRUCTIONS

The assembly mechanism of the **INTERLOCK®** Tiles is made out of a male and a female edge.

(See **Figure 1** at bottom)

A proper orientation of the Tile edges is necessary for a good installation.

Made in Canada, using 100% recycled PVC, your new Tiles have excellent wear resistance, and were specifically designed to withstand the weight of a motor vehicle. They are UV resistant and they incorporate a special drainage system which will allow water to circulate underneath, and evacuate through your floor drain.

Like all plastic products, these Tiles are subject to dimensional variations under changing weather conditions. They will therefore slightly expand during summer and slightly contract during winter.

## INSTALLATION

No tool, glue or adhesive is required to set-up this product, which should always be installed on a solid and at surface.

- 1) Make sure to first clean the floor thoroughly before you begin the installation. All lumps should be eliminated.
- 2) Always start the installation in one corner, pointing the female edges in the directions that additional tiles will be installed.

(See **Figure 2** at bottom)

- 3) During the installation, it is very important to leave a ½ inch space between the floor edge and the walls, in order to allow for the expansion and contraction of the Tiles.
- 4) Simply use your feet, or a rubber mallet to assemble the Tiles together.
- 5) If necessary, you should use an X-Acto knife and a ruler, to trim the tiles on the last row, to fit your room dimensions. Remember that it is much easier to cut a warm tile, than it is to cut a tile which is too cold.

**CLEANING**

Your new **INTERLOCK**® Tiles, will resist oil, grease and the majority of household chemical products. To clean them, you should first start with a vacuum cleaner to collect all the dust from the drainages holes, and then mop with water and a degreaser.

FIGURE 1


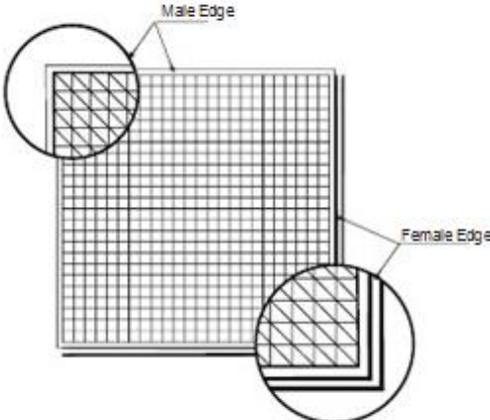


FIGURE 2

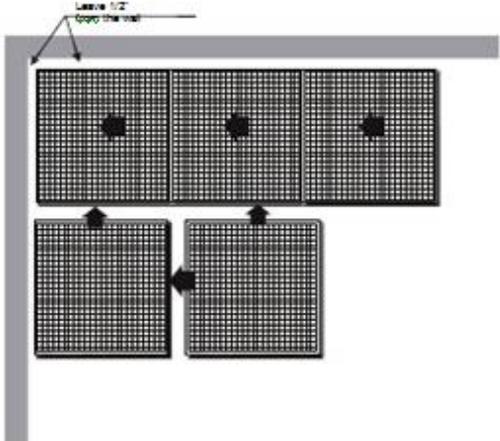

**MADE IN CANADA**